

When start working

1. Firstly stretch the horizontal leg,
2. Then stretch the vertical leg.

When finish working

1. Firstly retraction the vertical legs,
2. Then retraction the horizontal legs.

ISUZU 20m Straight Aerial Platform Truck Operation Guidance

1. Pull the brake, start the truck engine, press the clutch pedal, PULL OUT the PTO button, the PTO is start to make truck working.

PULL OUT
PUSH IN

Work Position
Off-Work Position



2. Extend out the 4 H-Shape hydraulic legs, Level 1,2,3,4 give direction, Level 5 give order, Level 6 upper working:

- Step 1 Push In Level 1,2,3,4 all to inside position
- Step 2 Push In Level 5 to inside position, make sure all legs full horizontal stretch out
- Step 3 Pull Out Level 1,2,3,4 all to outside position
- Step 4 Pull Out Level 5 to inside position, make sure all legs full vertical stretch out
- Step 5 After all legs fully stretch out, Push In Level 6 to inside position to operate the upper aerial platform system
- Step 6 When work finished, repeat the above steps in opposite way



3. **Optional one**-----to use remote control

box for operation:

- 0 Switch button for the Remote-Control Box
- 1 Press the side button to Ignition ON the truck engine
- 2 Press the side button to Flame OUT the truck engine
- 3 Press once to make the Remote-Control Box connect with the truck, then can operation the aerial platform truck (First Operation)
- 4 UP → Manlifter Clockwise rotation
- 5 DOWN → Manlifter Anticlockwise rotation
- 6 UP → Manlifter lifting up
- 7 DOWN → Manlifter falling down
- 8 UP → Manlifter extend out
- 9 DOWN → Manlifter retract back
- 10 UP → Bucket clockwise up
- 11 DOWN → Bucket anticlockwise down
- 12 UP → RPM increase
- 13 DOWN → RPM decrease
- 14 UP → Faster (Recommend)
- 15 DOWN → Slowly
- 16 Reserved
- 17 FORCE → when the truck warning alarm, means need to checking the working system, press ON the FORCE switch, at same time operation manlifter is available even warning alarm



**CEEC TRUCKS
FOR YOUR SUCCESS**



When start working

1. Firstly stretch the horizontal leg,
2. Then stretch the vertical leg.

When finish working


1. Firstly retraction the vertical legs,
2. Then retraction the horizontal legs.

4. **Optional two**-----to use truck mounted control box 1 for operation:

- 1 Power on → Whole electric box power ON
- 2 Power off → Whole electric box power OFF
- 3 Reserved
- 4 Caution on → Truck emergency light ON
- 5 Caution off → Truck emergency light OFF
- 6 UP → Truck engine Ignition ON
- 7 DOWN → Truck engine Flame OUT
- 8 UP → RPM increase
- 9 DOWN → RPM decrease
- 10 UP → Faster (Recommend)
- 11 DOWN → Slowly
- 12 Boom Lifting Up / Falling Down
- 13 Boom Extend Out / Retract Back
- 14 Boom Clockwise Rotation / Anticlockwise Rotation
- 15 Bucket Clockwise Rotation / Anticlockwise Rotation
- 16 Platform UP/DOWN & Rotation
- 17 FORCE → when the truck warning alarm, means need to checking the working system, press ON the FORCE switch, at same time operation manlifter is available even warning alarm
- 18 Emergency Stop
- 19 Lighting ON / Lighting OFF
- 20 Choose Remote Control Or Not

5. **Optional two**-----to use truck mounted control box 2 for operation:

- 1 UP → Truck engine Ignition ON
- 2 DOWN → Truck engine Flame OUT
- 3 Reserved
- 4 UP → Truck light ON
- 5 DOWN → Truck light OFF
- 6 UP → Truck horn ON
- 7 DOWN → Truck horn OFF
- 8 UP → Basket clockwise rotation
- 9 DOWN → Basket counterclockwise rotation
- 10 Emergency Stop Button
- 11 UP → Basket Forward
- 12 DOWN → Basket Backoff
- 13 UP → Manlifter stretch out
- 14 DOWN → Manlifter retract back
- 15 UP → Manlifter lifting up
- 16 DOWN → Manlifter falling down
- 17 UP → Manlifter clockwise rotation
- 18 DOWN → Manlifter counterclockwise rotation

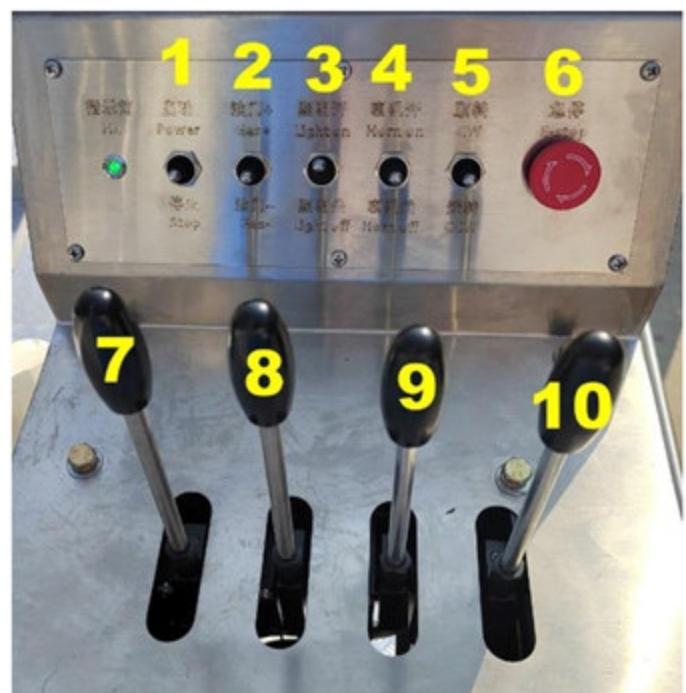

6. Hand Pump: when there is something wrong with truck chassis, or the electric system not working, use this Hand Pump to release the pressure, then can reposition the aerial platform truck
7. 24 hours technical support: 0086 155 7227 0555

CEEC TRUCKS
FOR YOUR SUCCESS